# VWR9 Assembly Instruction

## 1.Parts Included

## 2. Tools Needed

1 Bottle Neck Holder Strip(A)

1 Tape Measure

1 Bottle End Holder Strip(B)

1 Screwdriver


Screws

1 Level

Plastic Screw Hole Covers

1 Pencil for marking


**Drywall Plugs** 

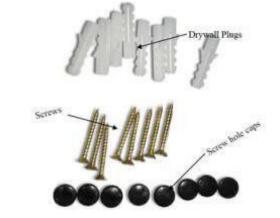

## 3. Instructions Steps

#### 1. Choose Bottle Direction:

Two different holder strips, one for bottle neck(B) and one for bottle end(A).





## 2.Layout:

- Strip A/B should be marked 6.985 cm away from nearby walls or obstructions.
  - Measure 19.05 cm' from Strip A to Strip B
- For multiple columns, recommended distance between two racks is 13.97cm.

### 3. Fastening bottle supports to wall:

- (1) After layout complete, using a level to ensure Bottle support Strips are vertically level before mounting.
- (2) Fastening screws to wall through the predrilled mounting holes in Bottle Supports Strips.Please note it to use drywall plugs when installing to protect wall.
- (3) Using screws hole caps to cover screw holes once all bottle Support Strips secured.

